
 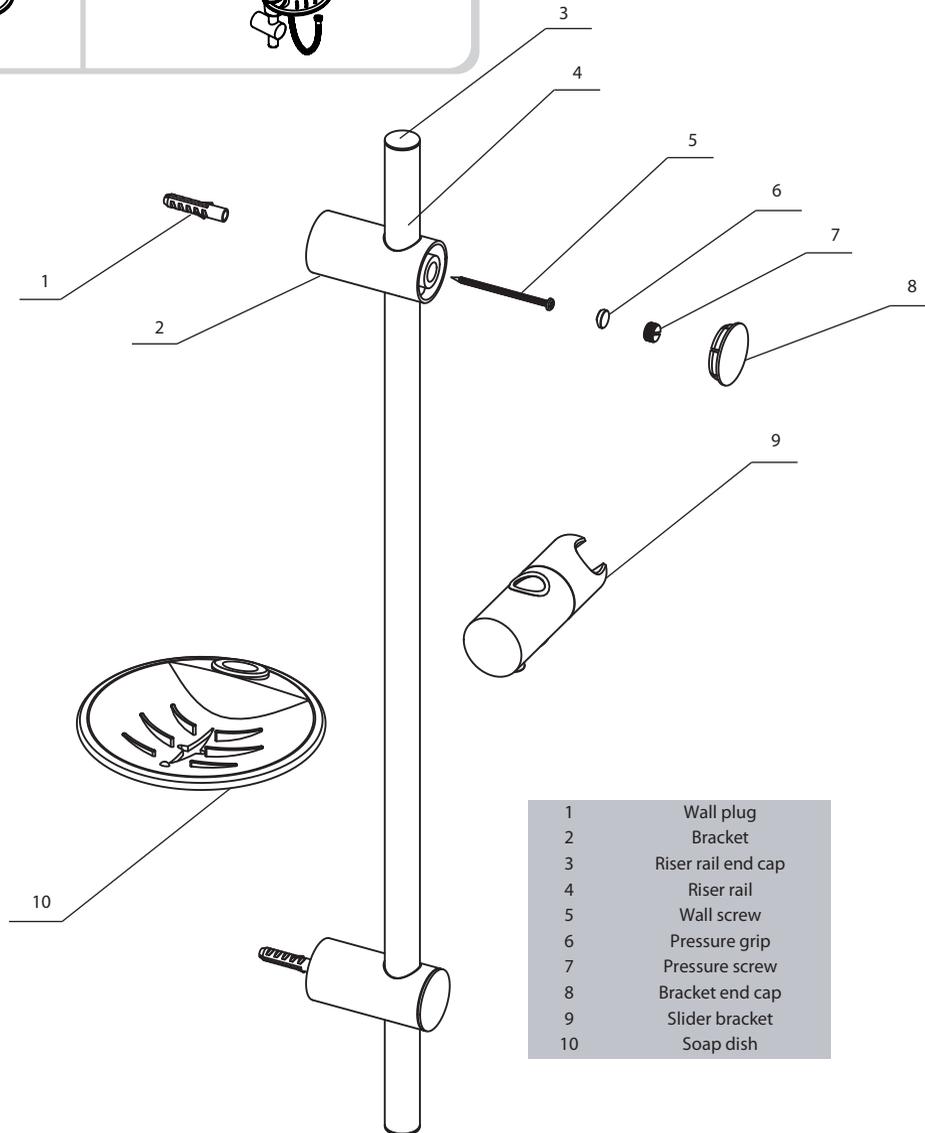
 


WAVE SLIDE RAIL SVRAIL01

WAVE SINGLE FUNCTION SHOWER KIT SVKIT01



- | | |
|----|--------------------|
| 1 | Wall plug |
| 2 | Bracket |
| 3 | Riser rail end cap |
| 4 | Riser rail |
| 5 | Wall screw |
| 6 | Pressure grip |
| 7 | Pressure screw |
| 8 | Bracket end cap |
| 9 | Slider bracket |
| 10 | Soap dish |

INSTALLATION PROCEDURE

1. Establish height of riser rail to suit requirements (see Fig 1).
2. Mark positions on wall for upper and lower brackets ensuring that the hole positions are vertically aligned. Drill holes for both the brackets and plug the wall.
3. Remove the bracket end caps from the brackets. Fix the lower bracket to the wall through the centre of the bracket using the fixings provided.
4. Fit the soap dish onto the rail. Fit the rail assembly into the lower bracket on the wall.
5. Place the top bracket in position and fix to the wall using the fixings provided. Slide the rail assembly into the top bracket.
6. Adjust the position of the rail relative to the brackets as desired. Once in the desired position, insert the pressure grips and pressure screws into the brackets and tighten the pressure screws to secure the rail assembly to the brackets (see Fig 2). Replace bracket end caps.

NOTE: The notch on the slider bracket fits the conical nut on the shower hose.

GENERAL NOTES

Fitting and Maintenance Instructions

Tips: Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is recommended. Beware of hidden pipes or cables. Take care when drilling on tiled surfaces as the drill may slip. Use a piece of masking tape to prevent the drill from wandering. When working near a bath, shower or basin, to avoid losing small parts, ensure the waste outlets are covered. Take care not to drop parts or tools into the bath, shower or basin.

Showerhead cleaning instructions:

To ensure optimum performance of the shower, clean the showerhead periodically to remove build-up of limescale or debris.

Showerhead periodical maintenance:

1. To remove limescale or debris on a daily basis, rub your thumb over the showerhead surface while the water is running.
2. To remove stubborn scale deposits, immerse the showerhead in an appropriate limescale remover. Rinse thoroughly before use.

Fig 1

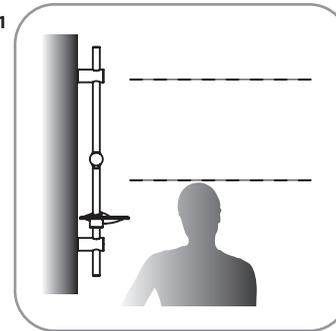


Fig 2

