


INSTALLATION

*It is essential that any surfaces of the unit which are cut during installation are re-sealed using an appropriate waterproof sealant, varnish or oil based paint. Failure to re-seal cut surfaces will invalidate the product warranty and may result in water damage.

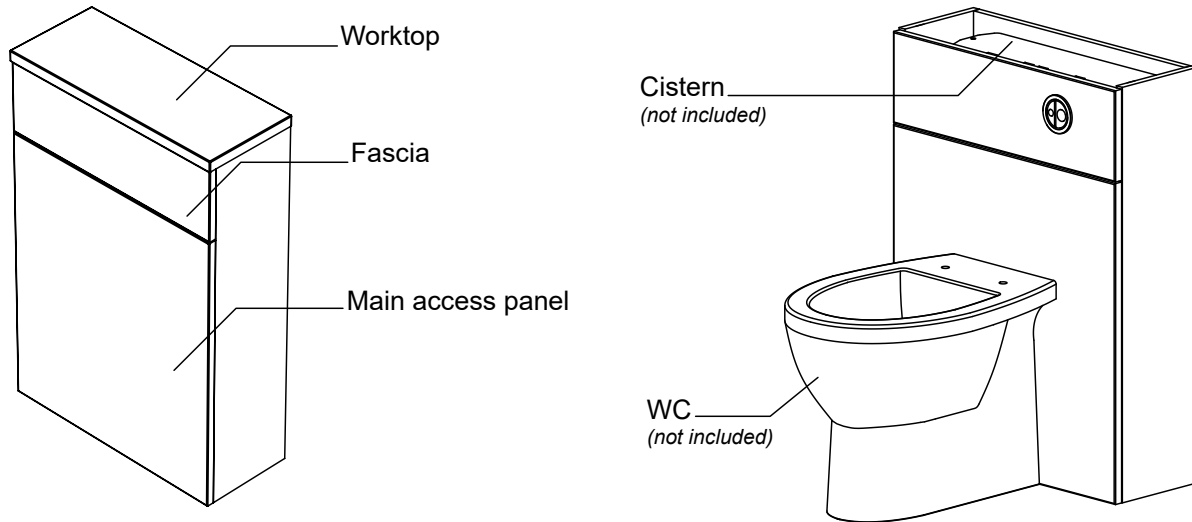

- 1) Remove worktop by gently pulling it upwards. This is fixed with push fit clips.
- 2) Remove top fascia by gently pulling it forwards. This is fixed with push fit clips.
- 3) Remove main access panel by simply sliding upwards. This is fixed on sliding clips.

4) For standard BTW pan

- Fit base unit to wall in required location ensuring correct position of supply and waste pipes.
- Fit WC and cistern according to manufacturer's instructions - check system carefully for leaks.
- Cut a suitable slot in the main access panel to allow for the soil pipe and inlet. Note: Cut this slot as wide as possible to make refitting the main access panel easier.
- Refit the panel by sliding it back into position. Silicone the joint between WC and access panel.

4) For Wall hung pan and frame

- Fit base unit to wall in required location ensuring correct position of supply and waste pipes.
- Fix the frame to the floor and into a SOLID BRICK WALL (through the top brace of the BTW unit) as per instructions included with frame.
- Cut a suitable hole in the main access panel to allow for the soil pipe, inlet and wall hung pan bolts.
- Refit the panel by sliding it back into position.
- Fix WC and cistern according to manufacturer's instructions - check system carefully for leaks.
- Silicone the joint between WC and access panel.

- 5) Drill suitably positioned / diameter hole in the fascia for the cistern operating button and install according to manufacturers guidelines.
- 6) Re-fit fascia.
- 7) Re-fit worktop.

AFTERCARE INSTRUCTIONS

- Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.
- All bathrooms should be well ventilated with a suitable extractor fan.
- Clean furniture with a soft damp cloth only and dry thoroughly once done.
- Handles must only be cleaned with a dry (microfiber) cloth.
- For removal of lime scale deposits on the basin use a suitable proprietary cleaner. Test on an inconspicuous area first.

DO NOT

- Use any abrasive cleaning agents, aggressive detergents or vinegar.
- Slide hard/sharp objects (cups, bottles etc) across the surface as these will result in scratches.

REPLACEMENT PARTS

Should you require any replacement components for this product please contact Roper Rhodes using the contact details below.