

INSTALLATION INSTRUCTIONS


Before installation, check that there is no damage to the basin.

IMPORTANT:

Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is recommended. Beware of hidden pipes or cables. Take care when drilling tiled surfaces as the drill might slip. Use a piece of masking tape to prevent the drill from wandering.

Fixing Kit:

The fixing kit provided with the basin contains: Plastic wall plug - A (x2), fixing bolt - B (x2), plastic insert -C (x2) and metal nut - D (x2). These fixings are suitable for solid walls only. Plasterboard or stud walls may require specialist fittings (not supplied).

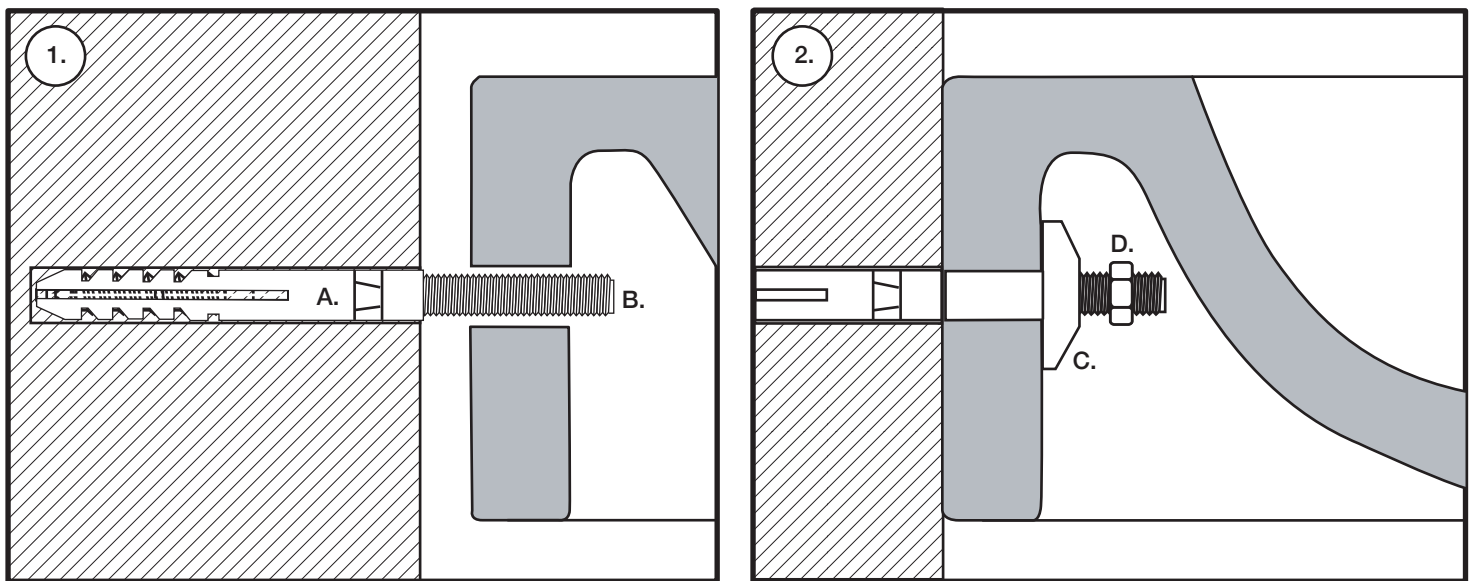

1. Drill two holes in the required positions on the wall using a 12mm masonry drill bit, to a depth of 65mm.
2. Push a wall plug into each hole.
3. Screw in a fixing bolt into each wall plug using a drill until just the flattened section is still visible.
4. Place the basin in position against the wall, putting the fixing bolts through the holes in the rear of the basin. (See fig. 1)
5. Push a plastic insert onto each fixing bolt. Screw a metal nut onto each fixing bolt and tighten slowly with a spanner to secure the basin to the wall. Be careful not to overtighten the nut as this may cause the ceramic to crack. (See fig. 2)

Customer Services:

Roper Rhodes, Brassmill Lane Trading Estate, Bath, BA1 3JF

T. 01225 303900 | F. 01225 448877 | E. sales@roperrhodes.co.uk | W. www.roperrhodes.co.uk