



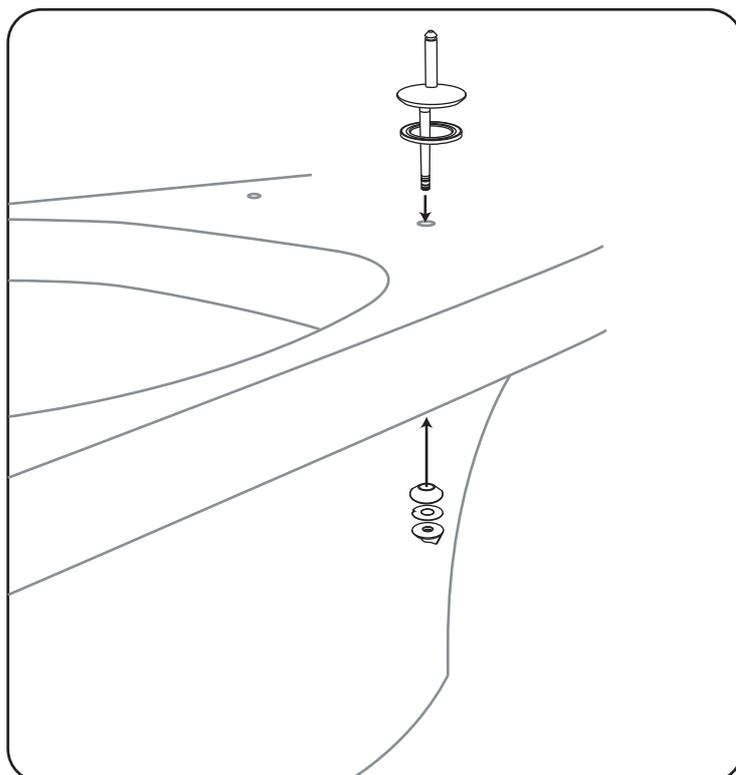

Toilet Seat Fitting Instructions & Product Care

Please read carefully before attempting to fit the seat. If you are not the end user, please make sure the aftercare instructions are made available for the end user to read.

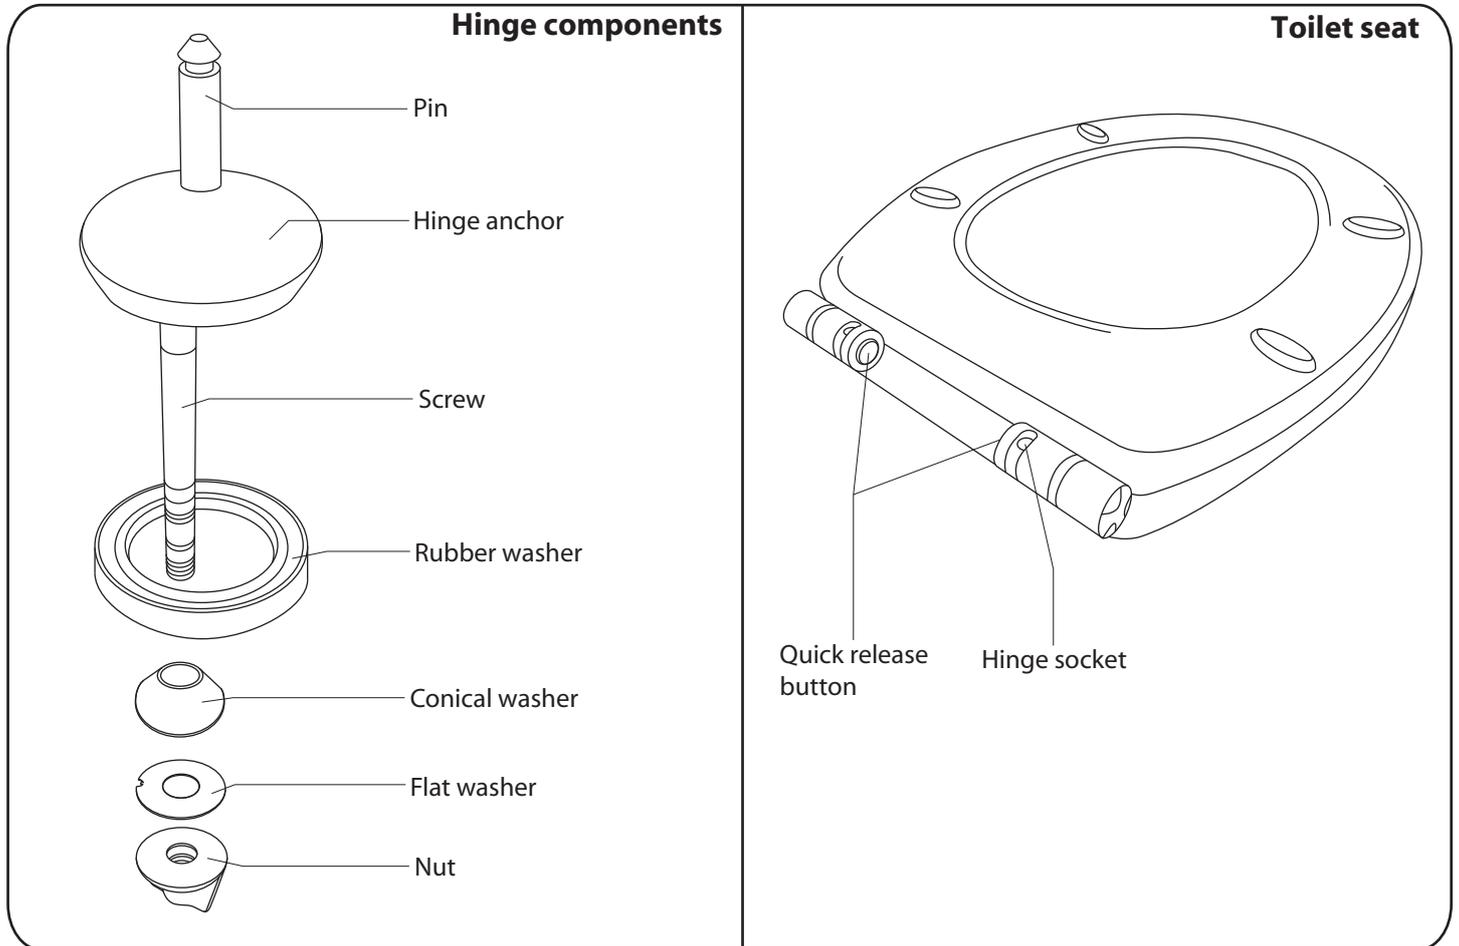


1. Fixing the hinge anchor:

Place the rubber washer on the base of the hinge anchor.

Insert the screw attached to the hinge anchor into the hole on the toilet pan.

Attach the conical washer, flat washer and nut onto the screw from the underside of the toilet pan and tighten until the conical washer just touches the underside of the toilet pan. **NOTE:** don't fully tighten at this stage as some adjustment may be required.

Repeat these steps fixing the second hinge anchor.

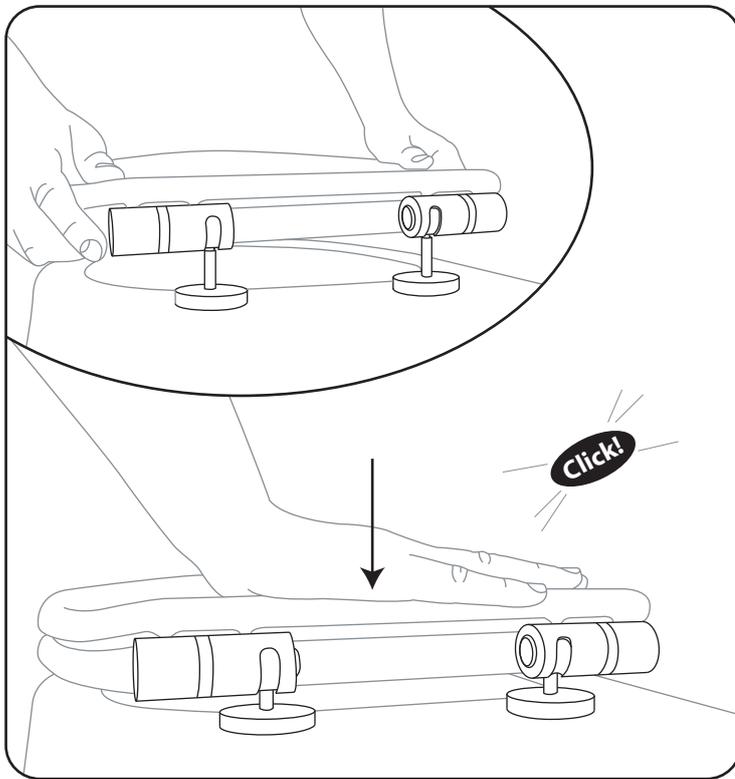


2. Fitting the seat:

Adjust the position of the hinge anchors so that the pins align with the sockets on the hinge (see hinge adjustment below).

Insert the pins into the hinge sockets and firmly press down until you hear them 'click' into position.


Now consider if any adjustment of the hinge anchor positions is required to make the seat line up with the edges of the toilet pan.

When you are satisfied the seat is in the correct position fully tighten the nuts on the underside of the toilet pan (shown in step 1).

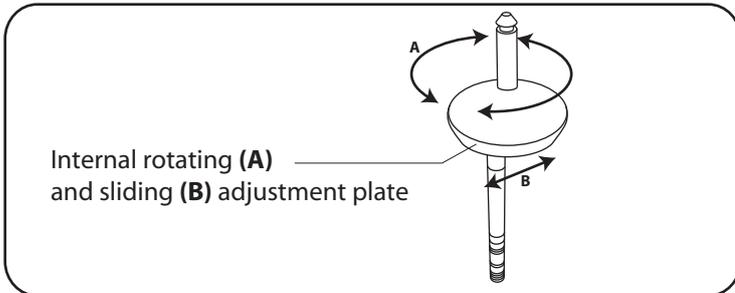

Hinge Adjustment:

Maximum adjustment of the pin position is achieved by rotating the hinge anchor around the screw (adjustment A). Further fine adjustment of the pin position can be achieved by sliding the screw in the adjustment plate (adjustment B).

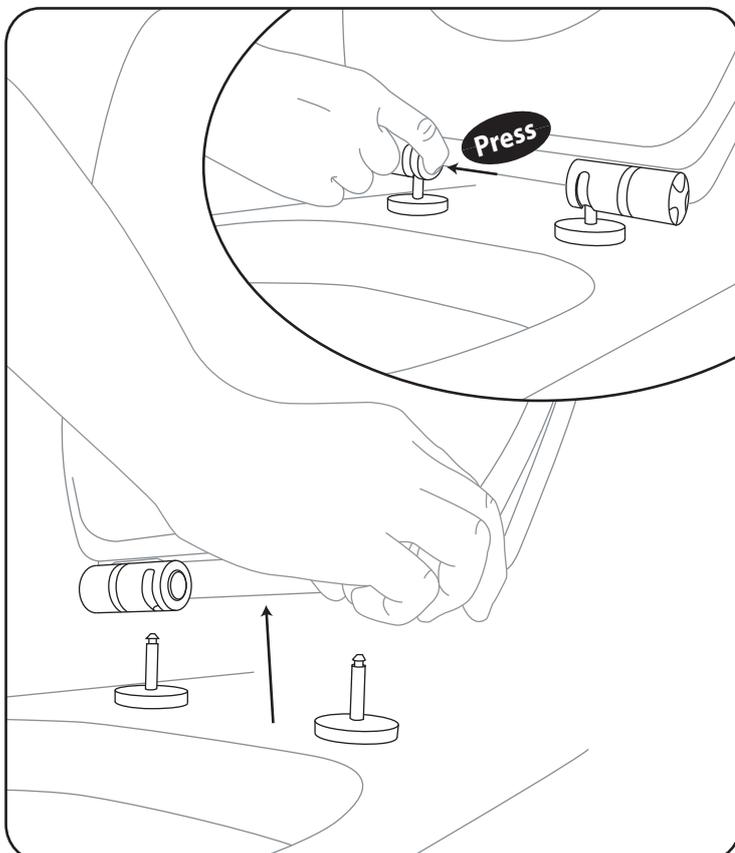

3. Quick release mechanism:

This toilet seat is designed so it can be quickly and easily removed for cleaning the toilet pan.

To activate the quick release lift the lid and seat up.

Press the buttons on the inner ends of the hinges and lift.

To replace the seat align the sockets with the pins and firmly press into position.

AFTERCARE INSTRUCTIONS

This toilet seat has a very hardwearing finish. The seat should however be treated with care.

1. Clean the surfaces weekly with a soft damp cloth and mild soap solution.
2. Do not use neat bleach, powder cleaners or cream cleaners.
3. Do not scour or scrub the surface.
4. Replacement hinges, fixings, and washers and can be obtained directly from Roper Rhodes Ltd at the address below. If possible please quote the seat product code in all correspondence.
5. WARNING - do not stand on the lid or ring of your toilet seat (for example when decorating the bathroom).